

DCZ72 系列

高速平板切割打样系统

★全新升级，享受更畅“快”体验

Newly upgraded, faster working experience

★全触摸屏操作，操作更便利




Equipped with touch screen, friendly machine interface

★精装盒/卡纸盒V槽精密切割

Precision V cut for chipboard and cardboard

★整体式机身设计，结构更稳定，更美观

Integrated machine design, more stable and beautiful.

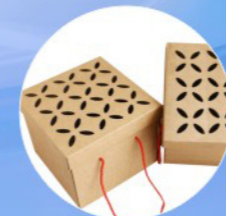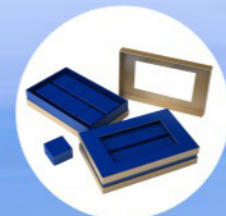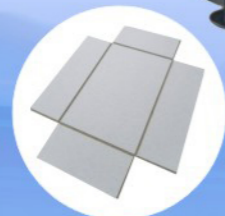

东莞市奥科电脑切割设备有限公司

DONG GUAN AOKE COMPUTER CUTTING-OFF EQUIPMENTS CO.,LTD.

地址：东莞市南城区白马黄金路华丰大厦三层B1号

电话：0769-38971760 手机：13829290375

技术支持：4001191760 邮箱：570768453@qq.com

网址：www.aokecnc.com



主要切割材料

Main cutting material

瓦楞纸，蜂窝板，珍珠棉，卡纸，泡沫板，灰板，KT板，雪弗板、塑料板、中空板，皮革、EVA、织物丝圈等
corrugated, honeycomb EPE, cardboard, foam board, gray board, PVC expansion sheet, coroplast, leather, EVA, fabric, gasket and so on.

主要应用行业

Main application industries

广告，展示，包装，彩印等行业的打样、切割、小批量生产
Sample maker, small batch production: advertising, display, packaging, color printing and other industries

技术参数

SPECIFICATION PARAMETERS

机型 Model	DCZ721310	DCZ721713	DCZ722516
有效加工面积 mm Effective cutting area	1300*1000mm	1700*1300mm	2500*1600mm
配置 Configuration	振动刀，半穿刀，拖刀，V切刀，压轮，笔，激光灯定位 Oscillating knife, kiss cut knife, drag knife, V cut knife, creasing wheel, pen, laser positioning		
最大速度 Max speed	1400mm/s		
最小切割机圆直径 Smallest cutting diameter	2mm		
最大切割厚度 Maximum cutting thickness	30mm		
驱动器 Driver	伺服 Servo		
切割精度 Cutting Precision	± 0.1mm		
重复精度 Repeat Precision	≤ 0.1mm		
功能 Function	振动刀切割、压折痕、切虚线、切半穿刀、V槽切割、绘刀绘图、激光定位、红外防护 Oscillating cutting, creasing, dotted line, kiss cut, V cut, plotter drawing, laser positioning, infrared protection		
切割介质 Cutting material	最厚30mm珍珠棉/EVA, 15mm瓦楞纸板, 3mm灰板、卡纸, 1.5mm厚的PVC胶片等。 max 30mm thickness EPE/EVA, 15mm thickness corrugated, 3mm thickness gray board, 1.5mm thickness cardboard PVC film, etc.		
设备组成 Equipment composition	工作台、控制箱、真空吸风泵、空气压缩机 Cutter table, control box, vacuum pump, air compressor		
介质固定方式 fixing method	真空吸附。如切割工艺盒的布料等透气的材料需在材料上覆盖一层薄膜 Vacuum pump adsorption. Breathable cloth need cover film		
真空 Vacuum pump	5.5KW, 380V		
数据格式 Data port	HPGL, DXF, PDF		
电压 Voltage	220V±10% 50Hz		
数据接口 Data port	并口，串口，USB LPT/COM/USB port		
选配 Option	AOKE CCD 视频定位系统, V切刀, 泡沫刀 Video registration system/ V cut tool/Foam tool		
占地尺寸(长*宽*高) Occupy dimension(L*W*H)	2200*1860*1180mm	2600*2160*1180mm	3400*2460*1180mm
备注 Note	其他尺寸可定做 Other size can be customized		